

Quick Operation Guide

While holding down the [DEMO/SONG] or [PIANIST STYLE] button, press the highlighted keys shown below to select preset songs, etc. or set parameters. (Refer to diagram 1/2 below.)

1

DEMO/SONG

Operation Confirmation Sounds

Preset Song

A1 A#1 C#0 D#0 E#0 F#0 G#0 A#0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

2

PIANIST STYLE

Pianist Style Volume

Pianist Style

Pianist Style Tempo

A1 A#1 C#0 D#0 E#0 F#0 G#0 A#0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

Quick Operation Guide

While holding down the [METRONOME/RHYTHM] button, press the highlighted keys shown below to select rhythms, or set parameters. (Refer to diagram **3** below.)

While holding down the [METRONOME/RHYTHM] and [PIANIST STYLE] buttons, press the highlighted keys shown below to set parameters. (Refer to diagram **4** below.)

